

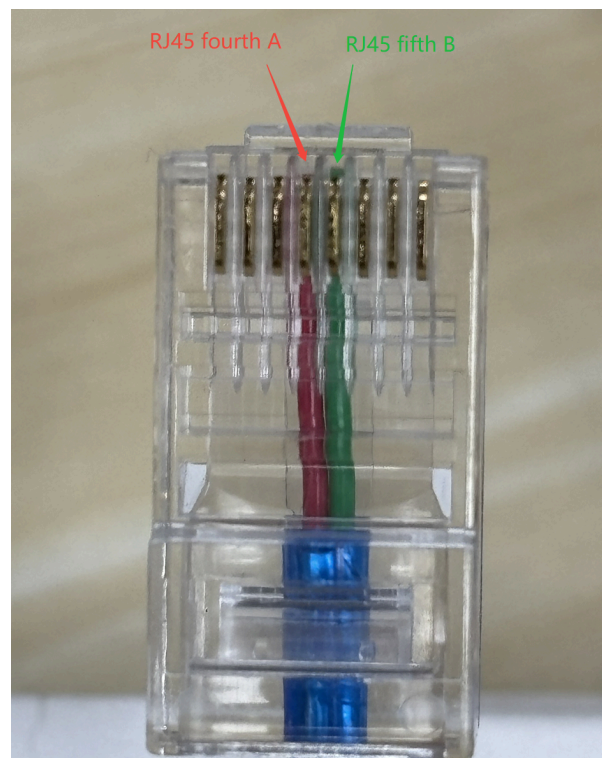


XHUB installation check of adding an inverter V1.1

1、XHUB RS485 connection to the COM/RS_485 port of the inverter. # XHUB的RS485接口连接逆变的RS_485/COM口(RJ45)

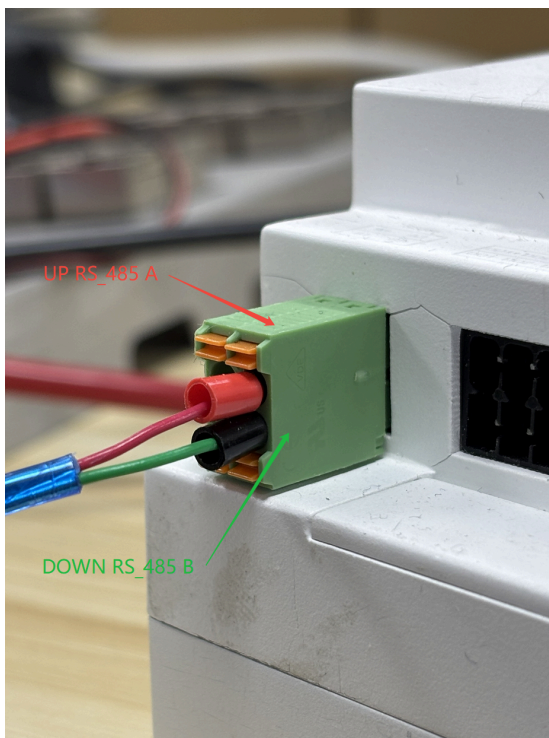

- 2、Remove the CT or the meter of the inverter. # 拆掉逆变器的CT或者电表
- 3、Remove the original pocket of the inverter. # 拆掉逆变器配套模块
- 4、Using USB drive for upgrade the ARM program (Provide the upgrade program separately). #升级逆变器的ARM程序（单独提供）

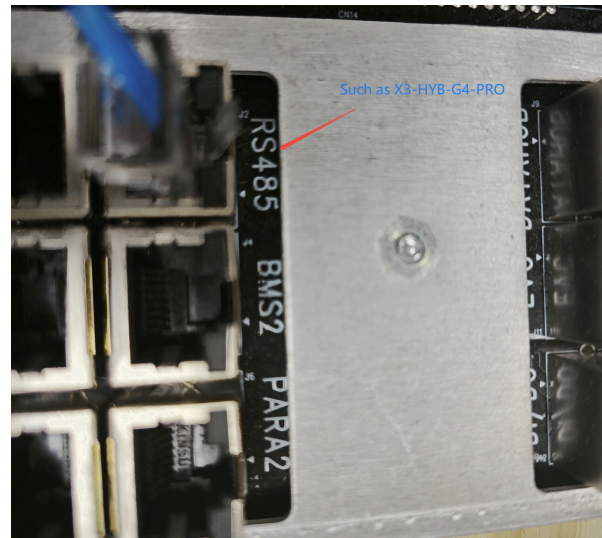





Please put the ARM upgrade file in the U disk directory:
\\Update\\ARM

- 5、Using USB drive for upgrade the DSP program (Provide the upgrade program separately). #升级逆变器的DSP程序（单独提供）



Please put the DSP upgrade file in the U disk directory:
\\Update\\DSP

- 6、Set the baud rate of the inverter to 19200 (Very important)!!!
- 7、After completing the above steps, open the ≥V6.9 version of the soalxcloud APP. # 完成上述步骤后，使用大于V6.9的solaxcloud APP，完成下图操作。

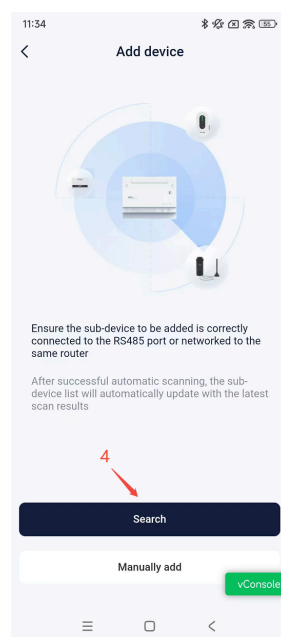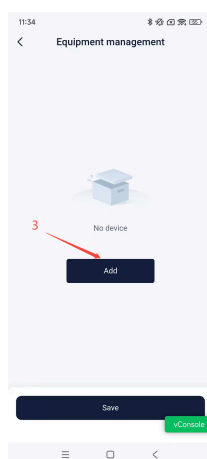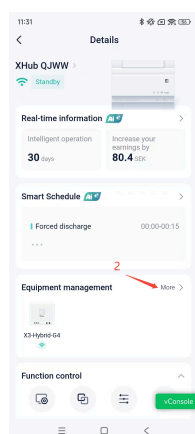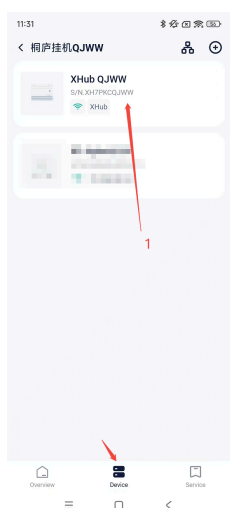

8、Wait for the search to be completed.Click "Confirm" # 等待搜索结果(逆变器)后，点击确认按钮。

Next comes the optional option.

9、External CT Setup Instructions (If not, no action is required.)# 外置CT的安装步骤如下图(没装外置CT，无需操作)。

